

BIN STRAPS INFO



What are they for?

The bin strap is designed to keep the rubbish inside the kerbside bins when they have been put out for collection. This is to stop cockatoos, kangaroos, passing vehicles and wind knocking over the bin and spreading rubbish.



How does it work?

- ◆ The strap has a payload of 3kg - this means it will **automatically release** when tipped upside down during collection.

Only one strap needed!

- ◆ Due to the nature of the waste in the Northern Grampians Shire, only **ONE STRAP** is needed to be hooked onto the lid.



One strap has been sufficient in keeping waste in the bin in all situations



Two straps can stop the waste coming out of the bin during collection

Durable design

- ◆ The s-bend shape in the strap body helps absorb shocks when the bin is knocked over and holds the lid closed
- ◆ Exceptional durability - designed to exceed the expected lifespan of the bin

Tested in the field

- ◆ The strap has been tested in blind trials, which showed that users are able to identify the purpose and latch the bin lid without instructions or prompting.

HOW TO INSTALL

STEP ONE

Wetting the SafeWaste with water first makes installation very easy



STEP TWO

Bring the SafeWaste under the bin lid handle so that the hook is facing down



STEP THREE

Bring the rounded end of SafeWaste across across the top of the bin lid handle



STEP FOUR

Thread the rounded end of SafeWaste through the rectangular ring



STEP FIVE

Pull the SafeWaste so the hook catches on the side of the bin



For more information, go to <https://safewaste.co.nz/>

